

Avaya D160 Registration

Before You Begin



Ensure that your device is not connected to a base station.

The handset display should read **Not Registered** or **Searching**.

If at any time the registration process fails, the handset display reads **Registration Failed** and the device returns to an **Unregistered** or **Searching** state.

Procedure

1. While the handset is in an **Unregistered** or **Searching** state, press the **Regist** soft key. The handset display flashes a message that reads [**Press Reg. Key On Base**].
 - a. If the handset is in a **Searching** state, the handset is attempting to find a new base station. Press the **Regist** soft key followed by the **OK** soft key to continue with the registration procedure.
2. Press and hold the **Registration** key on the front of the base station for approximately three seconds until the LED blinks.
 - a. *Note: The base station automatically exits registration mode when no handset or repeater registrations have been performed for over two minutes.*
3. After the handset finds the base station, you must enter the **four-digit DECT PIN code** and press **OK**. If the base station uses the default DECT PIN code, you can press the **Deflt** soft key. The **Cancel** or **On-Hook** soft keys cancel the registration process.
 - a. *Note: You have 30 seconds to enter the four-digit DECT PIN code before the handset returns to **Unregistered** mode. Enter login code (1234) and the extension number.*