VOICE.DATA.SECURITY

www.rottweilersystems.com

SAMSUNG OFFICESERV TIME AND DATE CHANGE PROGRAMMING GUIDE

To Change the Time and Date on the Samsung Handsets:

- From any handset press the **Transfer Key** and dial [2][0][0]
- The display will show **ENABLE CUS. PROG. & PASSCODE**:
- Enter customer passcode which is [1][2][3][4] as a factory default
- Press [1] to ENABLE CUS. PROG, then press the Speaker Key
- Enter the time & date program by pressing the **Transfer Key** dialing [5][0][5]

The Time and Date format is as follows:

W (**Day of the week**, 0-6) e.g., enter 0 for Sunday and 6 for Saturday.

MM (Month, 01-12) e.g., enter 01 for January and 12 for December.

DD (**Day of the month**) enter a number in the range 01-31.

YY (Year) enter the last two digits of the year, e.g. 07.

HH (**Hours**) 24-hour clock enter a number in the range 00–24.

MM (**Minutes**) enter a number in the range of 00–59.

 ENTER THE DATE AND TIME AND THEN PRESS TRANSFER KEY TO EXIT